

# FURIOUS FPV

## How to do connect FRSKY XJT Modul with Acrowhoop v2.

Step1: Choose Mode Module to D8.

On the XJT to the back of your FrSky Taranis transmitter. Change Mode Module by switch like as this picture.



SW1: ON


SW2: OFF

### Step 2: Configure module for Transmitter:

From Home screen on TX, press **Menu** button > **Page** button to go to Model Setup page 2.

On Model Setup page 2, press **ADD** or **Minus** button more times to go:

- **Internal RF** press **Enter** > **ADD** or **Minus** change to **OFF**.
- **External RF** press **Enter** > **ADD** or **Minus** change to **XJT** after that **D8**.
- Turn OFF transmitter.

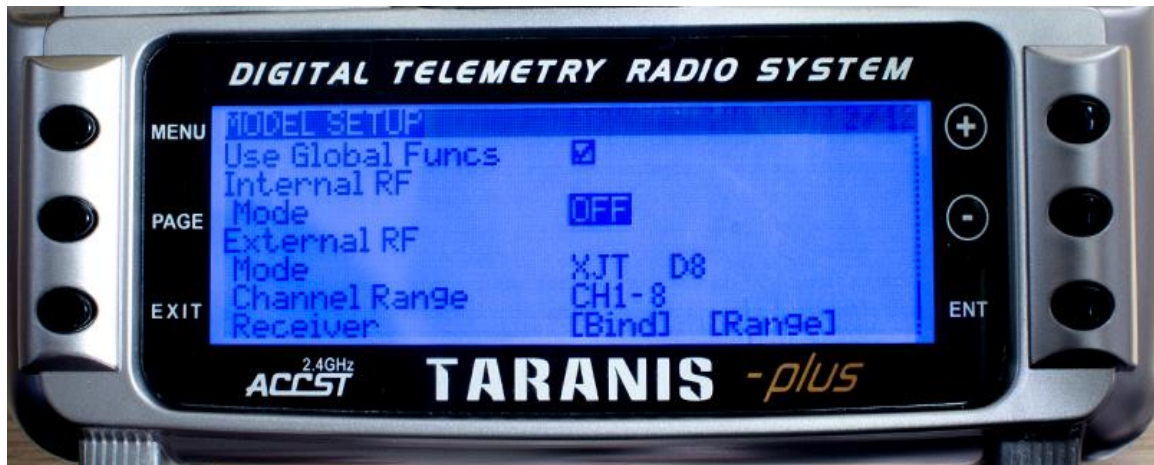

### Step 3: Active Bind mode for Acrowhoop V2:

**Plug Battery 1 cell for FC Acrowhoop v2.**

Hold Bind button while you plug battery, when you plug Battery at the Top Side you will see BLUE LED turn on.

**BLUE LED  
Turn On**



After plug Battery release **Bind** button.

Step 4: Bind TX with Acrowhoop:

Binding is the process of uniquely associating a particular receiver to a transmitter module. A transmitter module can be bound to multiple receivers (not to be used simultaneously). A receiver can only be bound to one transmitter module. Follow the steps below to finish the binding procedure.

1. Turn on the transmitter while holding the F/S button on the XJT module (see Mode and Compatibility table above). Release the button. The RED LED on the XJT module will flash and GREEN LED ON , indicating the transmitter is ready to bind to the receiver.

When BLUE LED on FC turn off, successful bind.

2. Turn off both the transmitter and the Acrowhoop.

4. Turn on the transmitter and connect the battery. The BLUE LED on the Acrowhoop indicates the Acrowhoop is receiving commands from the transmitter. The Acrowhoop/transmitter module binding will not have to be repeated, unless one of the two is replaced